


Android interface for 2018 Toyota sienna Panasonic DVD

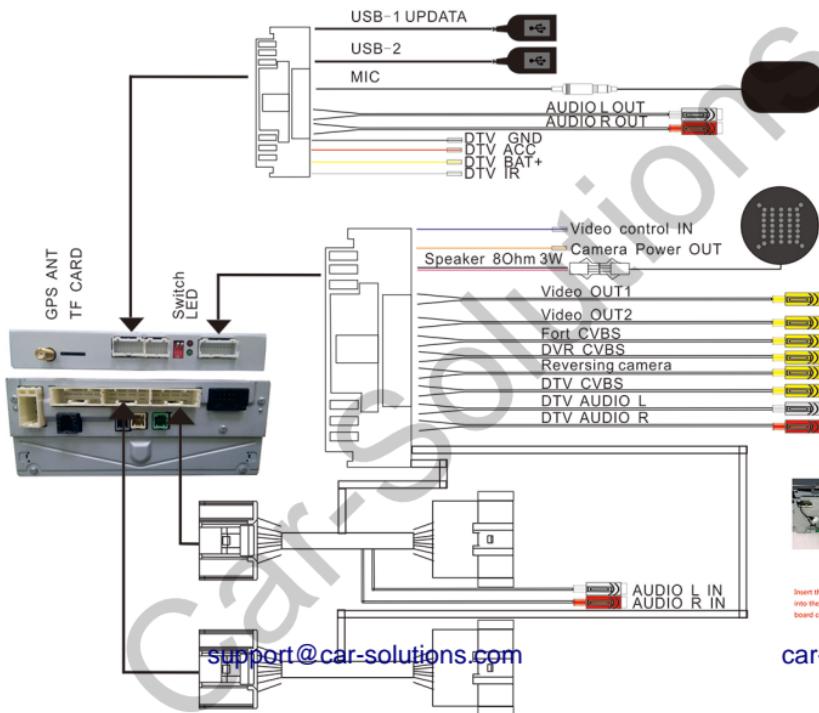

1 Remove these 6 screws



2 Remove 6 screws and FPC cables



3 Install the metal protection frame Fix 4 screws.



4 Fix android box



5 FPC line installation
6 SW1: Press the MENU button for 2 seconds



car-solutions.com